


EYELET PLACE DRAWINGS

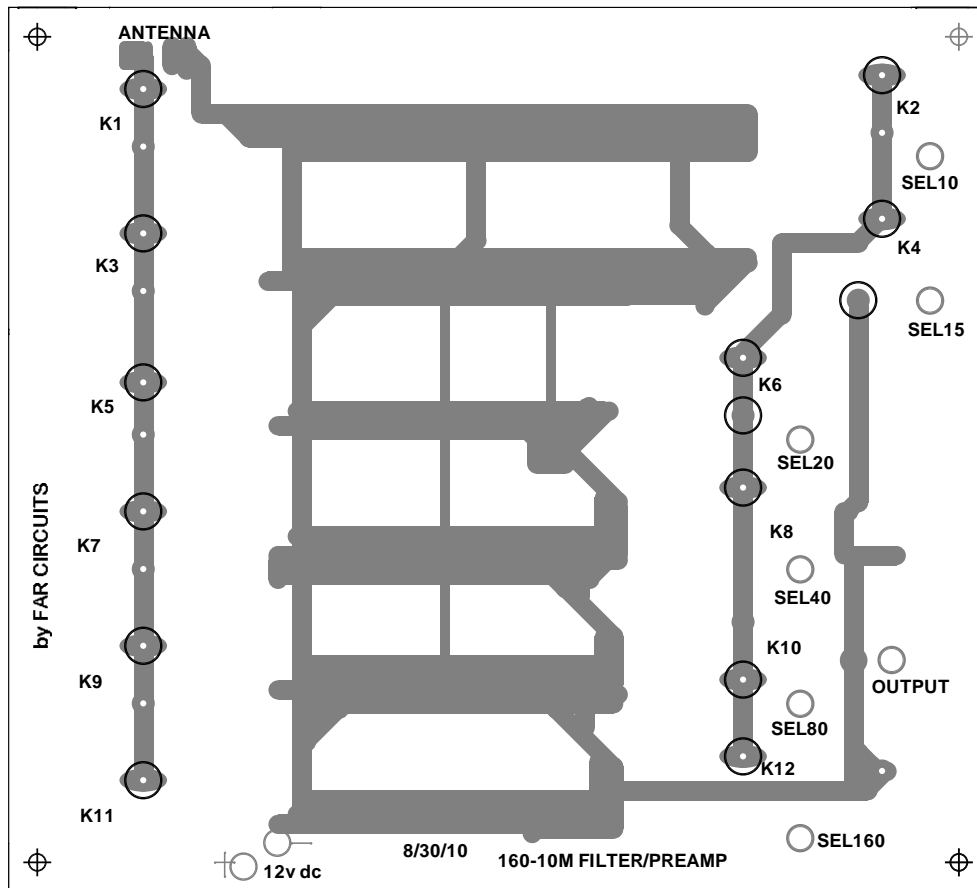

The circled areas in **BLACK** require eyelets. Insert the eyelet from the top side of the board and solder the rim of the eyelets and solder to the foil.